


SERVICE DATA

319

Microphone Shockmount

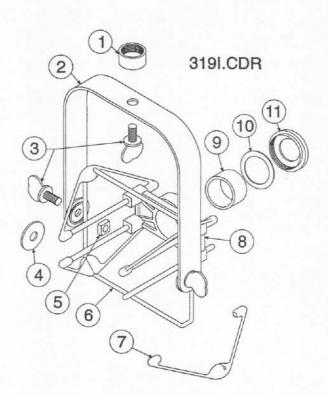

PARTS LIST		
Ref. No.	Part No.	Description
1	B 2473 HU	Stud, Black
2	71332	Bail, Silkscreened
3	20743 HU	Wing Bolt (3)
4	38309	Friction Washer (2)
5	20050 HU	Square Nut (2)
6	75558 HU	Shockmount Ring
7	78297	Suspension Cord (4)
8	82766 XX	Support S/A
9	72009	Gland
10	38007 AD	Slip Washer
11	72621 HU	Cap, Black

DISASSEMBLY/ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED:

NONE

NOTE: The application of a tool to a painted surface will result in the scratching and marring of the paint.

SUSPENSION CORD REPLACEMENT:

- GRASP THE DEFECTIVE SUSPENSION CORD (ITEM 7) WITH YOUR FINGERS AND REMOVE FROM THE FRONT AND BACK PIN OF THE SUPPORT S/A (ITEM 8). PULL THE CORD AWAY FROM THE CORNER OF THE SHOCKMOUNT RING (ITEM 6).
- REPLACE WITH A NEW ITEM 7 BY REVERSING THE PROCEDURE OF STEP 1.

WING BOLT, FRICTION WASHER, AND NUT, OR BAIL REPLACEMENT:

- INSERT THE FRICTION WASHER (ITEM 4) BE-TWEEN ITEM 2 AND ITEM 8.
- INSERT THE WING BOLT (ITEM 3) INTO THE HOLE OF THE BAIL (ITEM 2), THE FRICTION WASHER (ITEM 4), A ND THE SUPPORT S/A (ITEM 8).
- CAPTURE THE WING BOLT WITH THE NUT (ITEM 5)
 AND TIGHTEN.

CAP, SLIP WASHER, AND GLAND REPLACEMENT:

- INSERT THE GLAND (ITEM 9) INTO THE SUPPORT S/A (ITEM 8).
- PLACE THE SLIP WASHER (ITEM 10) INTO THE CAP (ITEM 11).
- 3. SCREW THE CAP ONTO THE SUPPORT S/A.
- INSERT THE MICROPHONE INTO THE SUPPORT S/A THROUGH THE GLAND AND TIGHTEN THE CAP TO CAPTURE THE MICROPHONE.

SUPPORT S/A REPLACEMENT:

- REMOVE THE FOUR SUSPENSION CORDS (ITEM 7) FROM THE PINS OF THE SUPPORT S/A (ITEM 8).
- UNSCREW THE CAP (ITEM 11) AND REMOVE THE SLIP WASHER (ITEM 10) AND THE GLAND (ITEM 9) FROM THE END OF THE SUPPORT S/A (ITEM 8).
- INSERT THE NEW SUPPORT S/A (ITEM 8) AND CAPTURE WITH THE FOUR SUSPENSION CORDS (ITEM 7).
- INSERT THE GLAND (ITEM 9) INTO THE REAR OF THE SUPPORT S/A (ITEM 8). PLACE THE SLIP WASHER (ITEM 10) INTO THE CAP (ITEM 11). SCREW THE CAP ONTO THE SUPPORT S/A (ITEM 8).
- INSERT THE MICROPHONE INTO THE SUPPORT S/A AND THROUGH THE GLAND.
- SECURE THE MICROPHONE IN THE SHOCKMOUNT BY TIGHTENING THE CAP (ITEM 11).