

Frequency Options for the FMR-70

Traveling Frequencies		TV Channel 7		TV Channel 8		TV Channel 9	
Frequency Suffix	Frequency (MHz)	Frequency Suffix	Frequency (MHz)	Frequency Suffix	Frequency (MHz)	Frequency Suffix	Frequency (MHz)
065	171.905	019	175.000	025	183.000	070	186.100
066	171.045	021	177.800	026	183.800	032	190.400
067	170.245	022	178.400	027	184.400	071	191.300
068	169.505						
TV Channel 10		TV Channel 11		TV Channel 12		TV Channel 13	
072	192.100	076	198.100	076	204.100	078	210.100
036	195.800	047	201.800	047	208.400	051	213.800
073	197.000	077	203.100	077	209.250	079	215.300