

TELEX.

TELEX COMMUNICATIONS, INC.

9600 Aldrich Ave. So., Minneapolis, MN 554520 U.S.A.


REFEREE SWITCH BOX

ORDER NO. 64420001

PN 802396

INSTRUCTION MANUAL

27163-A-001-A

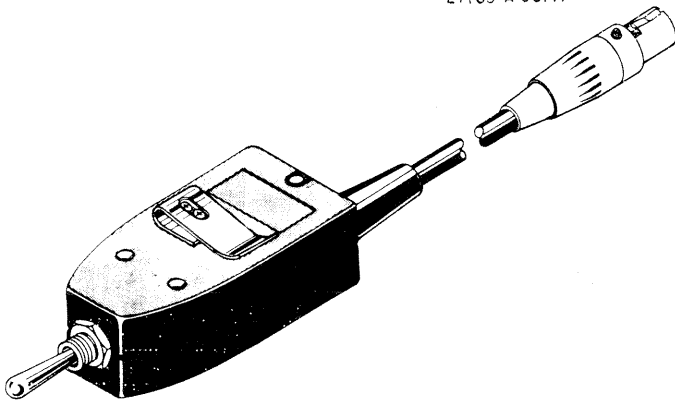

Overall View of Referee Switch Box

General

The TELEX Referee Switch Box was designed to meet National Football League specifications to provide switching from the belt transmitter to an outboard location.


The Referee Switch Box provides quick and easy audio on/off operation for the referee, when used with the WT-50 and WT-55 Belt Transmitters.

Operation and Placement

NOTE: Your belt transmitter must be modified by an Authorized Service Facility in order for the Referee Switch Box to operate.


Insert your lapel microphone plug into the Mic Jack of the Referee Switch Box. Plug the connector from the switch box into the Mic Jack of your belt transmitter.

27149-A-002-A

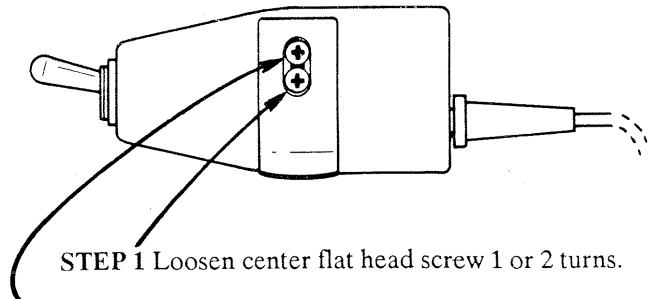


STEP 1 Loosen center flat head screw 1 or 2 turns.

STEP 2 Remove top (pan head) screw completely.

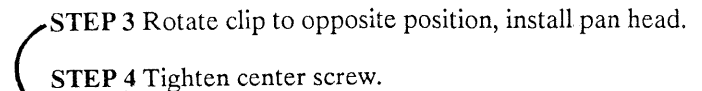

STEP 3 Rotate clip to opposite position, install pan head.

STEP 4 Tighten center screw.

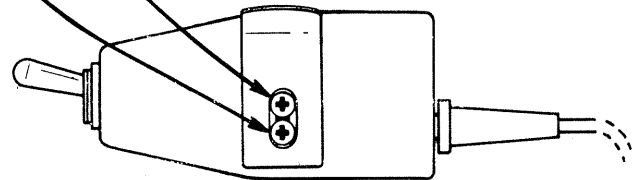

Clip Reversing Detail

NOTE: For maximum uninterrupted service, always start with a new 9 volt alkaline battery (Mallory MN 1604 or equivalent) or an 8.4 volt Nicad battery in your belt transmitter.


Refer to your Belt Transmitter Owner's Manual for operational procedures and Setting Gain Levels.

Refer to the illustration on the back of this sheet for placement of the Referee Switch Box and belt transmitter for best optimum performance.

MIC WIRING FOR REFEREES

MIC

Clip the mic to pocket or collar. The mic cord should loop out of the mic switch unit and enter the waist band under the right arm. Dress the cord under the shirt for user's comfort.

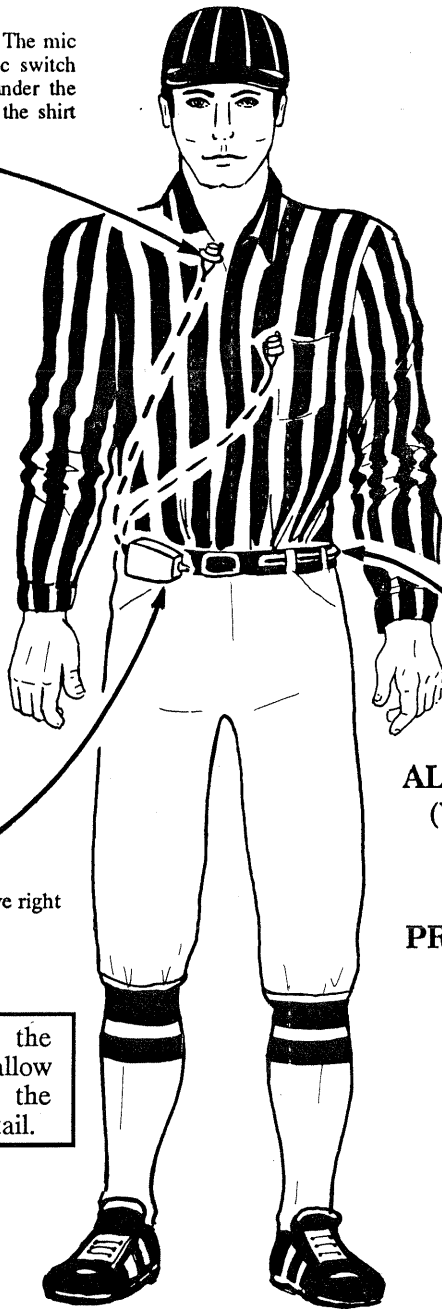

MIC SWITCH

Clip the switch unit on belt above right front pocket.


NOTE: The belt clip on the switch may be reversed to allow wear on the left side of the body. See clip reversing detail.

* ANTENNA
ALTERNATE POSITION
(WT-50, 55, 100, 200)

ANTENNA
PREFERRED POSITION
(WT-50, 55, 100, 200)

MIC SWITCH CORD UNIT

Feed the cord from the mic switch through belt loops above right rear pocket and loop the cord into the transmitter.

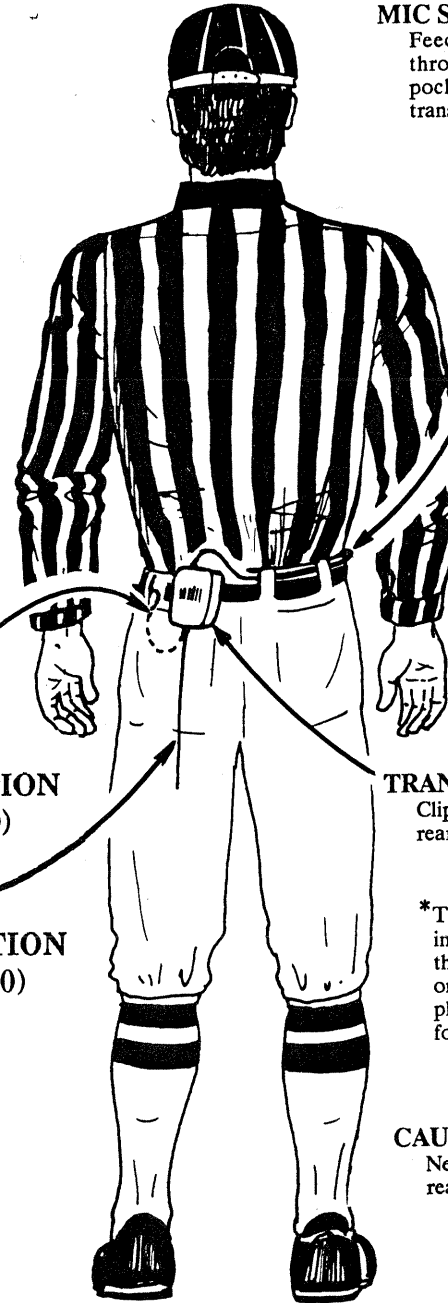

TRANSMITTER

Clip the transmitter on belt above left rear pocket

*The trailing wire antenna works best in the preferred position. Feeding the antenna through the belt loops on the left side and clipping it in place will give adequate performance for most applications.

CAUTION!

Never coil the antenna and place it in rear pocket.