





Electro-Voice®
a gulton company
600 Cecil Street
Buchanan, Michigan 49107
Phone: 616-695-6831
TWX: 810-270-3135

SERVICE DATA

MODEL DH2012

PARTS LIST AND DIAPHRAGM REPLACEMENT INSTRUCTIONS

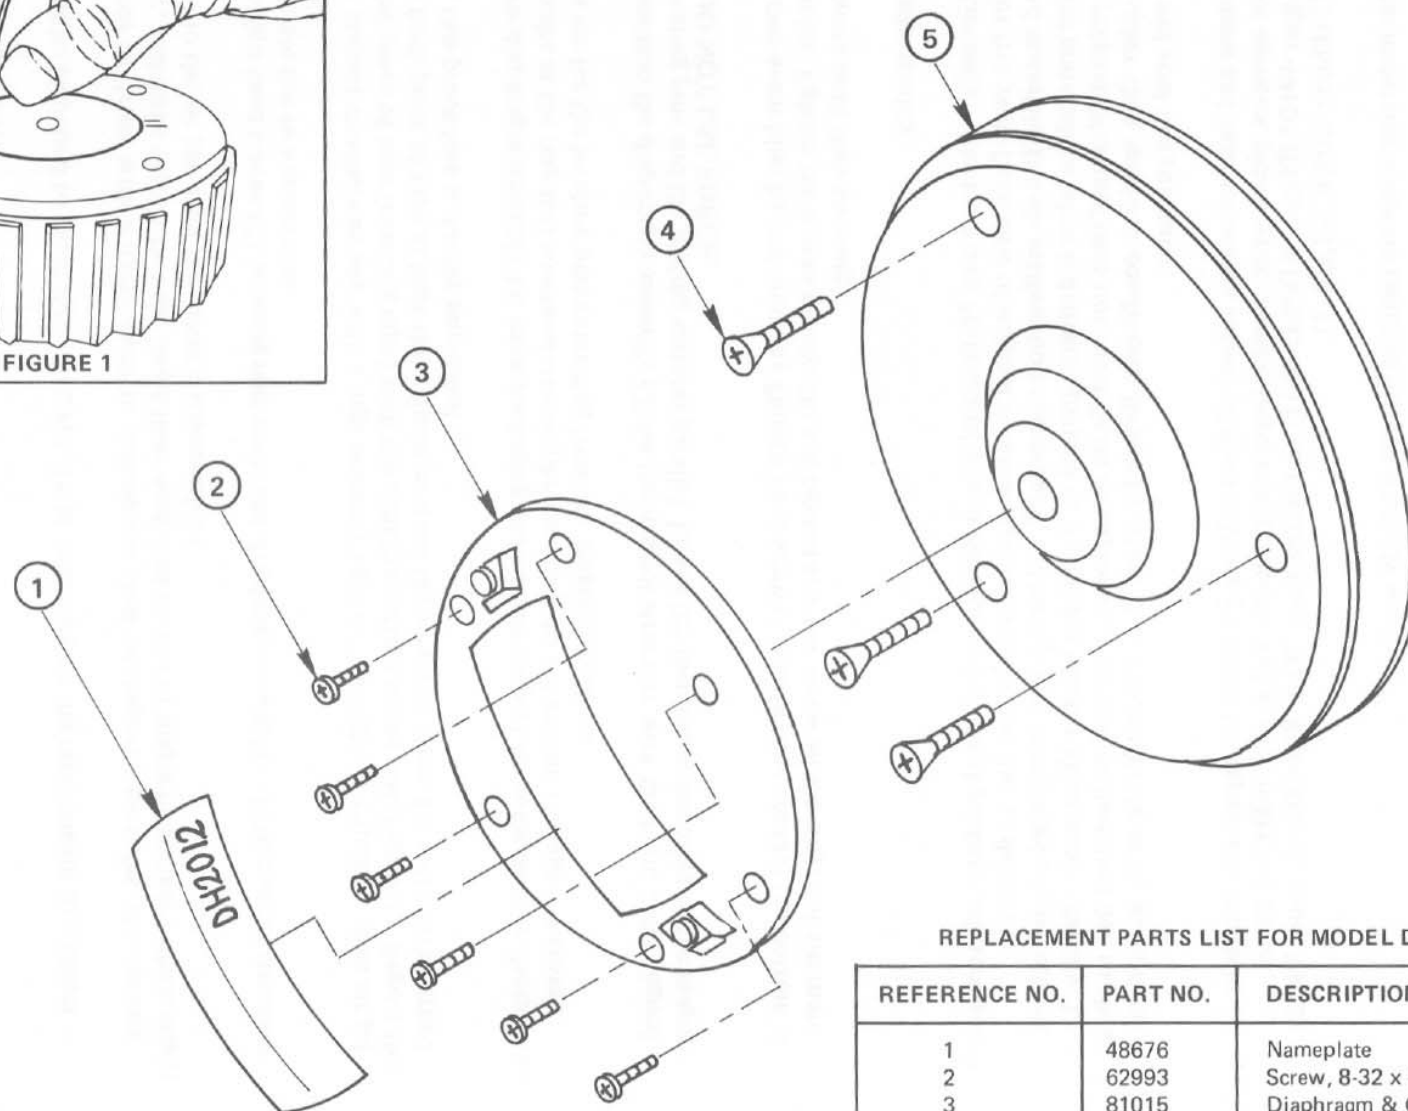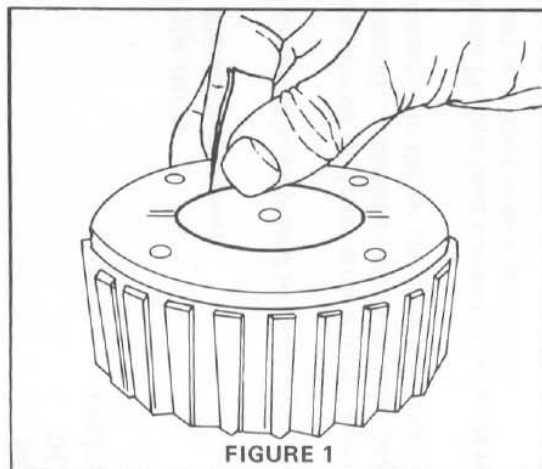

REPLACEMENT PARTS LIST FOR MODEL DH1012A

REFERENCE NO.	PART NO.	DESCRIPTION
1	48676	Nameplate
2	62993	Screw, 8-32 x 5/8" (6)
3	81015	Diaphragm & Cover Assembly
4	63033	Screw, 1/4-20 x 1-3/8" (3)
5	89394	Magnet Structure

MODEL DH 2012
DIAPHRAGM KIT
Replacement Instructions

TOOL REQUIRED

1 Phillips Screwdriver

NOTE: Care must be exercised to avoid dust, dirt, etc., from collecting on the replacement diaphragm.

1. Clean outside of driver with a damp cloth to remove any dust or magnetic particles, etc., before disassembly, and make certain that the immediate work area is clear of magnetic particles which might be attracted to the air gap after the driver is disassembled.
2. Remove Phillips head screws (2) securing rear cover and diaphragm assembly (3) to magnet structure (5) and separate the two assemblies.
3. Inspect the magnet structure air gap with a high intensity light or flashlight. If required, clean air gap with a folded piece of tape (masking tape) with the adhesive surface facing out (Figure 1). Repeat this step with a fresh piece of tape at least three times, or until the air gap is clean. On units with burned voice coils, this procedure is doubly important.
4. Remove new diaphragm assembly kit from packaging and visually inspect for prior damage. Notice the two blind holes in the ring that surrounds the diaphragm (they do not extend through the cover). These holes are for the locating pins extending from the magnet structure.
5. Carefully position the diaphragm assembly (3) on the magnet structure with the blind holes aligned with the locating pins and the mating surfaces parallel. Lower the diaphragm assembly to the magnet structure. **DO NOT USE FORCE.**
6. Secure the two assemblies by installing the Phillips head screws (2) until they contact the bottom of the screw holes. Tighten the screws evenly. Do not tighten any one screw all the way, but alternate opposite screws until they are snug.
7. Check acoustic quality.

WARRANTY (Limited). Electro-Voice Professional Sound Reinforcement Loudspeakers and Accessories are guaranteed for five years from date of original purchase against malfunction due to defects in workmanship and materials. If such malfunction occurs, unit will be repaired or replaced (at our option) without charge for materials or labor if delivered prepaid to the proper Electro-Voice service facility. Unit will be returned prepaid. Warranty does not cover finish or appearance items or malfunction due to abuse or operation at other than specified conditions. Repair by other than Electro-Voice or its authorized service agencies will void this guarantee.

For shipping address and instructions on return of Electro-Voice products for repair and locations of authorized service agencies, please write: Service Department, Electro-Voice, Inc., 600 Cecil Street, Buchanan, Michigan 49107 (Phone: 616/685-6831) or Electro-Voice West, 8234 Doe Avenue, Visalia, California, 93277 (Phone: 209/625-1330,-1).

Electro-Voice also maintains complete facilities for non-warranty service.

Service and repair address for this product: Electro-Voice, Inc., 600 Cecil St. Buchanan, Michigan 49107.

Specifications subject to change without notice.