

**DESCRIPTION**

Model CWR-1 fits Electro-Voice model E-V 1181, E-V 1182, E-V 1281, and E-V 1282 Stereo Receivers.

INSTALLATION

Remove rubber feet from bottom of receiver by taking out the machine screws located in the center of each foot. These screws may be discarded. *DO NOT DISCARD RUBBER FEET.*

NOTE: The metal cover supplied on your Electro-Voice receiver should not be removed when installing unit in walnut case. This cover serves as a shield which prevents pickup of stray AC fields which can result in undesirable hum.

Insert the chassis into walnut case by sliding it in from the front. Push chassis in until front panel rests firmly against recessed lip of walnut frame on front of case. Be sure that AC line cord, attached at rear of chassis, does not jam between

chassis and inside of case as chassis is being inserted.

Turn case and chassis assembly on the top and place it on a soft surface (such as a towel), so that top of case will not be marred. Insert two 3/4-inch self-tapping screws (supplied with case) into holes near center of bottom of case. Engage screws in holes provided in bottom of chassis and tighten with screwdriver. If holes in chassis do not line up with holes in bottom of case, make sure chassis is pushed firmly back into case as far as it will go.

Place rubber feet, removed from bottom of receiver in Step 1, over four small holes provided near corners of bottom of case. Insert four 5/8-inch wood screws (supplied with case) through feet and into small pilot holes. Tighten in place with screwdriver. Unit is now ready for operation and may be placed in the desired location.

